EU Directive 2020/2184 on the quality of water intended for human consumption



## **ΡΑССНЕТТО**

BRAVOMIX DUE PACK BRAVOMIX PACK





## **OUR PACK PROPOSAL** For your saving



## **BRAVOMIX DUE PACK**

Qada		Pack composition			Pieces
Code		Filter	Pump		for package
56022052	Kit Facile	BravoDue att. ¾"	Minidue att. ¾"	Connection kit	1
	cod. KT100	cod. FT320	cod. PM011S	cod. 99022023	



## **BRAVOMIX PACK**

	Oada		Pack c	omposition		Pieces
Code		Filter	Pump		for package	
	56022054	Kit Facile	BravoFil att. ¾"	Minidue att. ¾"	Connection kit	1
		cod. KT100	cod. FT020	cod. PM011S	cod. 99022023	



Connection kit - Not sold separately



## **KIT FACILE** All-in-one multifunctional device





### CHARACTERISTICS

Kit Facile is a multifunctional device to facilitate and standardize the installation of Acqua Brevetti systems.

Kit Facile is made with brass body, by-pass button and hardness adjustment valve; nuts and tangs are supplied for the hydraulic connection. The white pressure knob marked by an arrow accompanied by the wording "Push for by-pass" and the by-pass button. The white screw knob marked with a double arrow and the symbols "+" and "-" and the valve for adjusting the hardness. In the front part of Kit Facile there are the predispositions for the assembly of two sampling taps. The taps allow you to take water upstream and downstream of the treatment to check its characteristics (degree of softening, dosage of anti-scaling and anti-corrosive).

For maintenance and sanitation interventions, it is possible to contact the industry professionals.

### WHAT WE SUPPLY

KIT FACILE is packed in a plastic bag and placed inside a smooth cardboard box.


The standard supply includes KIT FACILE with  $2\# \frac{1}{2}$ " plugs,  $2\# \frac{3}{4}$ " nuts and shanks, instruction manual. The sampling taps are excluded from the supply


 Code	Model	Connections IN/OUT	Flow rate m³/h	Pieces per package
KT100	Kit facile	1"M threading for ¾" pipe coupling	2,0	8

### OVERALL DIMENSIONS EXPRESSED IN MM



### **EXAMPLE OF INSTALLATION SCHEME**

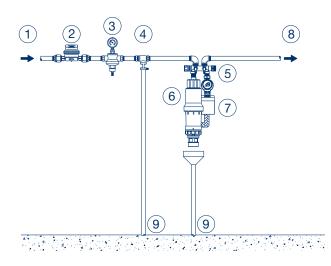

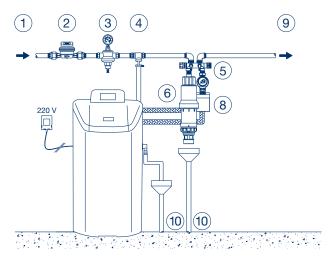

### Legend

- 1. Raw water inlet;
- 2. Main water meter;
- 3. Pressure reducer;
- 4. Disconnector;
- 5. KIT FACILE;
- 6. BravoFIL filter;
- 7. MiniDUE dosing pump; 8. Treated water outlet;
- 9. Discharge.

### Legend

- 1. Raw water inlet;
- 2. Main water meter;
- 3. Pressure reducer;
- 4. Disconnector;
- 5. KIT FACILE:
- 6. BravoFIL filter;
- 7. ASTREA water softener;
- 8. MiniDUE dosing pump;
- 9. Treated water outlet;
- 10. Discharge.

### **GUIDELINES FOR CORRECT MAINTENANCE**



The correct operation and duration of the equipment over time depend on correct installation, proper use and methodical application of the maintenance instructions supplied.

First year	Second year	Third year	Fourth year	Fifth year
O-RING	O-RING	O-RING	O-RING	O-RING
Check tightness, in case	Check tightness, in case of leakage change			
of leakage change	of leakage change	of leakage change	of leakage change	
SANITATION	SANITATION	SANITATION	SANITATION	SANITATION
INTERVENTION	INTERVENTION	INTERVENTION	INTERVENTION	INTERVENTION
Annually or for periods of				
inactivity exceeding				
30 days				



# MINIDUE 3/4

Compact volumetric dosing pump



- ✓ self-priming, with injection valve that also acts as a valve of no return
- ✓ suitable for installation upstream of the treatment systems of the entire sanitary line

### CHARACTERISTICS

Range of new mechanical volumetric dosing pumps for dosing AcquaSIL 2/15®, anti-corrosion anti-scale product, pump equipped with horizontal or vertical connection. MiniDUE 3/4 is made with a brass attachment plate and a plastic pump body; in the MiniDUE version it is supplied with nuts and tangs for hydraulic installation;

AcquaSIL 2/15<sup>®</sup> product is supplied in disposable bags of gr. 250 or of 1 kg, to be connected directly to the pump body or to be used with the remote kit connection provided with the standard product.

MiniDUE 3/4 with the dosage of products based on polyphosphates, even at very low concentrations, will prevent the formation of limescale and corrosion in the hot water distribution lines.

For maintenance and sanitation interventions, please contact the industry professionals.



### WHAT WE SUPPLY

MiniDUE 3/4 is placed inside a smooth cardboard box.


The standard supply includes: MiniDUE 3/4 dosing pump, 250 g AcquaSIL 2/15® refill, remote installation kit, instructions manual.

Code	Connections	Flow rate m³/h	Min/max pressure bar	Pieces per package	Kg. per package
PM011S	3⁄4" M	1,8	1,5 - 10	24	26,4
			5		•

### OVERALL DIMENSIONS EXPRESSED IN MM



### **EXAMPLE OF INSTALLATION SCHEME**

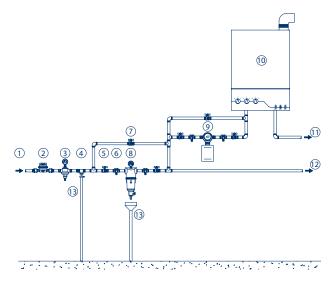

### Legend

- 1. Raw water inlet;
- 2. General counter;
- 3. Pressure reducer;4. Disconnector;
- 5. Shut-off valve;
- 6. Sampling tap;
- 7. By-pass valve;
- 8. Filter;
- 9. MiniDUE dosing pump;
- 10. Boiler;
- 11. Hot water outlet;
- 12. Cold water outlet;
- 13. Discharge.

### GUIDELINES FOR CORRECT MAINTENANCE



The correct operation and duration of the equipment over time depend on correct installation, proper use and methodical application of the maintenance instructions supplied.

First year	Second year	Third year	Fourth year	Fifth year
CHAMBER ASSEMBLY Clean or lubricate with food grade silicone	CHAMBER ASSEMBLY Clean or lubricate with food grade silicone	CHAMBER ASSEMBLY Replace	CHAMBER ASSEMBLY Clean or lubricate with food grade silicone	CHAMBER ASSEMBLY Clean or lubricate with food grade silicone
SANITATION	SANITATION	SANITATION	SANITATION	SANITATION
INTERVENTION	INTERVENTION	INTERVENTION	INTERVENTION	INTERVENTION
Annually or for periods of inactivity longer than 30 days	Annually or for periods of	Annually or for periods of	Annually or for periods of	Annually or for periods of
	inactivity longer than 30	inactivity longer than 30	inactivity longer than 30	inactivity longer than 30
	days	days	days	days

# **ACQUASIL® 2/15**







- $\checkmark$  hinders the formation of limestone deposits
- ✓ prevents corrosive phenomena of metal components
- $\checkmark$  effective with water with hardness between 5°f and 35°f
- $\checkmark$  it also gradually heals already encrusted circuits
- ✓ flexible disposable bags from gr. 250 or kg. 1
- $\checkmark$  supplied with a bag of gr. 250 in each MiniDUE pump package

### **CHARACTERISTICS**

Aqueous solution of specific polyphosphates for drinking water with double protective anticorrosive and anti-scale effect - moderate hardness up to 35 ° f - instantaneous temperatures up to 80 ° C and storage temperatures up to 60 ° C.

	Code	Description	Kg. per package	Pieces per package
	PC100	Box containing 4 refills of gr. 250 / each	1	8
_	PC104	Box containing 1 refill of 1 Kg	1	8



## **BRAVODUE** Manual cleaning filter







✓ 360 ° swiveling attachment plate

- ✓ built-in non-return valve
- ✓ dirty drain valve

### CHARACTERISTICS

 
BravoDUE is manual cleaning filter with 360° adjustable wall connection plate, with built-in non-return valve and a drain valve.

BravoDUE has a brass connection plate with built-in non-return valve. The bowl is in Grilamid<sup>®</sup> (high strength polyamide) and includes a built-in drain valve. The cartridge is made in stainless-steel, and it is clamped on a plastic bushing with O-ring sealing. The specific structure of the filtering cartridge makes it resistant to pressure shock eliminating problems of deformation and crushing.

Raw water filtration occurs from OUT to IN of the stainless-steel cartridge.

BravoDUE is supplied with a plastic key to open the bowl and a hand brush to facilitate cleanings.

For maintenance and sanitation interventions, it is possible to contact the industry professionals.



360° adjustable connection plate with built-in non-return valve




Drain valve: fast cleaning

### WHAT WE SUPPLY

BravoDUE is packed in a cardboard box; inlet and outlet connections on adjustable connection plate are supplied with sealing caps preventing any contamination; they need to be removed before installation. Standard supply includes BravoDUE filter, bag with brass connections, sump opening key, instructions for use - maintenance - assembly - installation (including declaration of conformity).


Code	Connections	Flow rate (Δp = 0,5 bar) m³/h	Filtration grade µm	Min/max pressure bar	Pieces per package	Kg. per package
FT320	3⁄4" M	4,2	89	1,5 - 10	10	12
FT322	1" M	4,5	89	1,5 - 10	10	12
FT324	1" 1⁄4 M	5,7	89	1,5 - 10	10	12

### OVERALL DIMENSIONS EXPRESSED IN MM

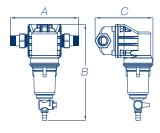

Code	Width - A	Height - B	Depth - C
FT320	177	249	150
FT322	179	249	150
FT324	190	249	150

### EXAMPLE OF INSTALLATION SCHEME

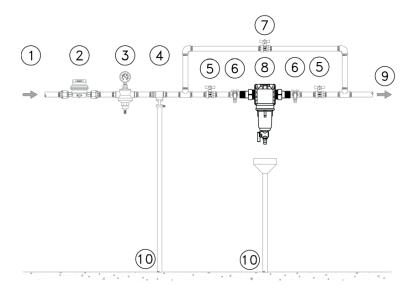

### Legend

1. Raw water inlet

- 2. Main water meter
- 3. Pressure reducer (if any)
- 4. Disconnector (if any)
- 5. Shut-off valve
- 6. Samplingtap
- 7. By-pass valve
- 8. BravoDUE filter
- 9. Treated water outlet
- 10. Discharge

### GUIDELINES FOR CORRECT MAINTENANCE



The correct operation and duration of the equipment over time depend on correct installation, proper use and methodical application of the maintenance instructions supplied.

First year	Second year	Third year	Fourth year	Fifth year
CARTRIDGE ASSEMBLY				
Cleaning	Cleaning	Cleaning	Cleaning	Change if necessary
SANITATION INTERVENTION	SANITATION INTERVENTION	SANITATION INTERVENTION	SANITATION INTERVENTION	SANITATION INTERVENTION
Annually or for periods of inactivity exceeding 30 days	When replacing the cartridge Annually or for periods of inactivity exceeding 30 days			



## BRAVOFIL

Semi-automatic self cleaning filter



- ✓ cartridge brushing and backwashing system with filtered water
- ✓ 360° rotatable connection plate with built-in non-return valve
- ✓ calendar date marker to indicate the sanitation cycle

### CHARACTERISTICS

BravoFIL is a semi-automatic self-cleaning filter with 360° adjustable connection plate.

Offering a patented brushing system performed by using clean water, with simultaneous Backwash cleaning system of the cartridge and discharging of the dirt.

BravoFIL is made with brass connection plate with threads according to EN 10226-1 and EN 228-1, Bowl in Grilamid® (high strength polyamide) and nylon cleaning brushes.

The cartridge is made in stainless steel. The specific structure of the filtering cartridge makes it resistant to pressure shock eliminating problems of deformation and crushing. All models are equipped with tangs and nuts.

The self-cleaning system starts the backwash with clean water and the cartridge brushing at the same time.

Raw water filtration occurs from OUT to IN of the stainless-steel cartridge.

 
For maintenance and sanitation interventions, it is possible to contact the industry professionals.



Double cleaning internal turbojet cartridge + external brushing



The filter is equipped with 5 brushes for cleaning the filter cartridge; the brushes can be equipped with silver wire to prevent bacterial proliferation inside the filter



360 ° swiveling plate with built-in non-return valve

### WHAT WE SUPPLY

BravoFIL is packed in a cardboard box; inlet and outlet connections on adjustable connection plate are supplied with sealing caps preventing any contamination; they need to be removed before installation. Standard supply includes: BravoFIL S filter, bag with brass connections kit, instructions for use - maintenance - assembly


- installation (includes: BravoFIL S filter, bag with brass connections kit, instructions for use - maintenance - asse

Code	Connections	Flow rate (Δp = 0,5 bar) m³/h	Filtration grade µm	Min/max pressure bar	Pieces per package	Kg. per package
FT020	3⁄4" M	3,2	100	1,5 - 10	8	10
FT022	1" M	4,5	100	1,5 - 10	8	10
FT024	1"1⁄4 M	5,0	100	1,5 - 10	8	11

**Remark:** upon request 30 – 50- and 150-micron filtration rating available


When placing orders, please specify the filtration required rating after the product nr. E. g. FT022-50. Price will not vary

### **OVERALL DIMENSIONS EXPRESSED IN MM**

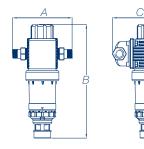

Code	Width - A	Height - B	Depth - C
FT020	177	350	136
FT022	179	350	136
FT024	190	350	136

### **EXAMPLE OF INSTALLATION SCHEME**

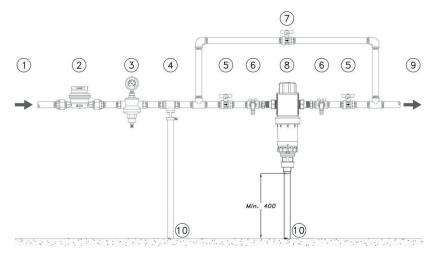

### Legend

1. Raw water inlet

- 2. Main water meter
- 3. Pressure reducer (if any)
- 4. Disconnector (if any)
- 5. Shut-off valve
- 6. Samplingtap
- 7. By-pass valve
- 8. BravoFIL filter
- 9. Treated water outlet
- 10. Discharge

### GUIDELINES FOR CORRECT MAINTENANCE

The correct operation and duration of the equipment over time depend on correct installation, proper use and methodical application of the maintenance instructions supplied.

First year	Second year	Third year	Fourth year	Fifth year
CARTRIDGE ASSEMBLY				
Cleaning	Cleaning	Cleaning	Cleaning	Change if necessary
SANITATION INTERVENTION	SANITATION INTERVENTION	SANITATION INTERVENTION	SANITATION INTERVENTION	SANITATION INTERVENTION
Annually or for periods of inactivity exceeding 30 days	When replacing the cartridge Annually or for periods of inactivity exceeding 30 days			

Treating water is useful and convenient

Distributed by



Rue des Foudriers, 26 - 7822 Ghislenghien - BELGIUM Mail: info@valeco.be - Tel: +32(0)68 57 20 71

